



**Please Note:**

You must ensure that your structural opening is completely square to avoid any fitting issues on the day of installation.

**Please note:**

This information is to be used as a guide only. These calculations are based on a typical example and **not** to be used as definitive. Please ensure that you only use the estimated/proposed measurements/dimension based on the exact materials being used along with the actual external measurements of the rooflight size quoted or ordered to calculate the internal timber structural opening size and the maximum external fully weathered upstand size.